


WIRING DIAGRAM (For EG)

⚠ Means important safety item, which must be replaced, when necessary, by a part specified or meeting the specification by the manufacturer.

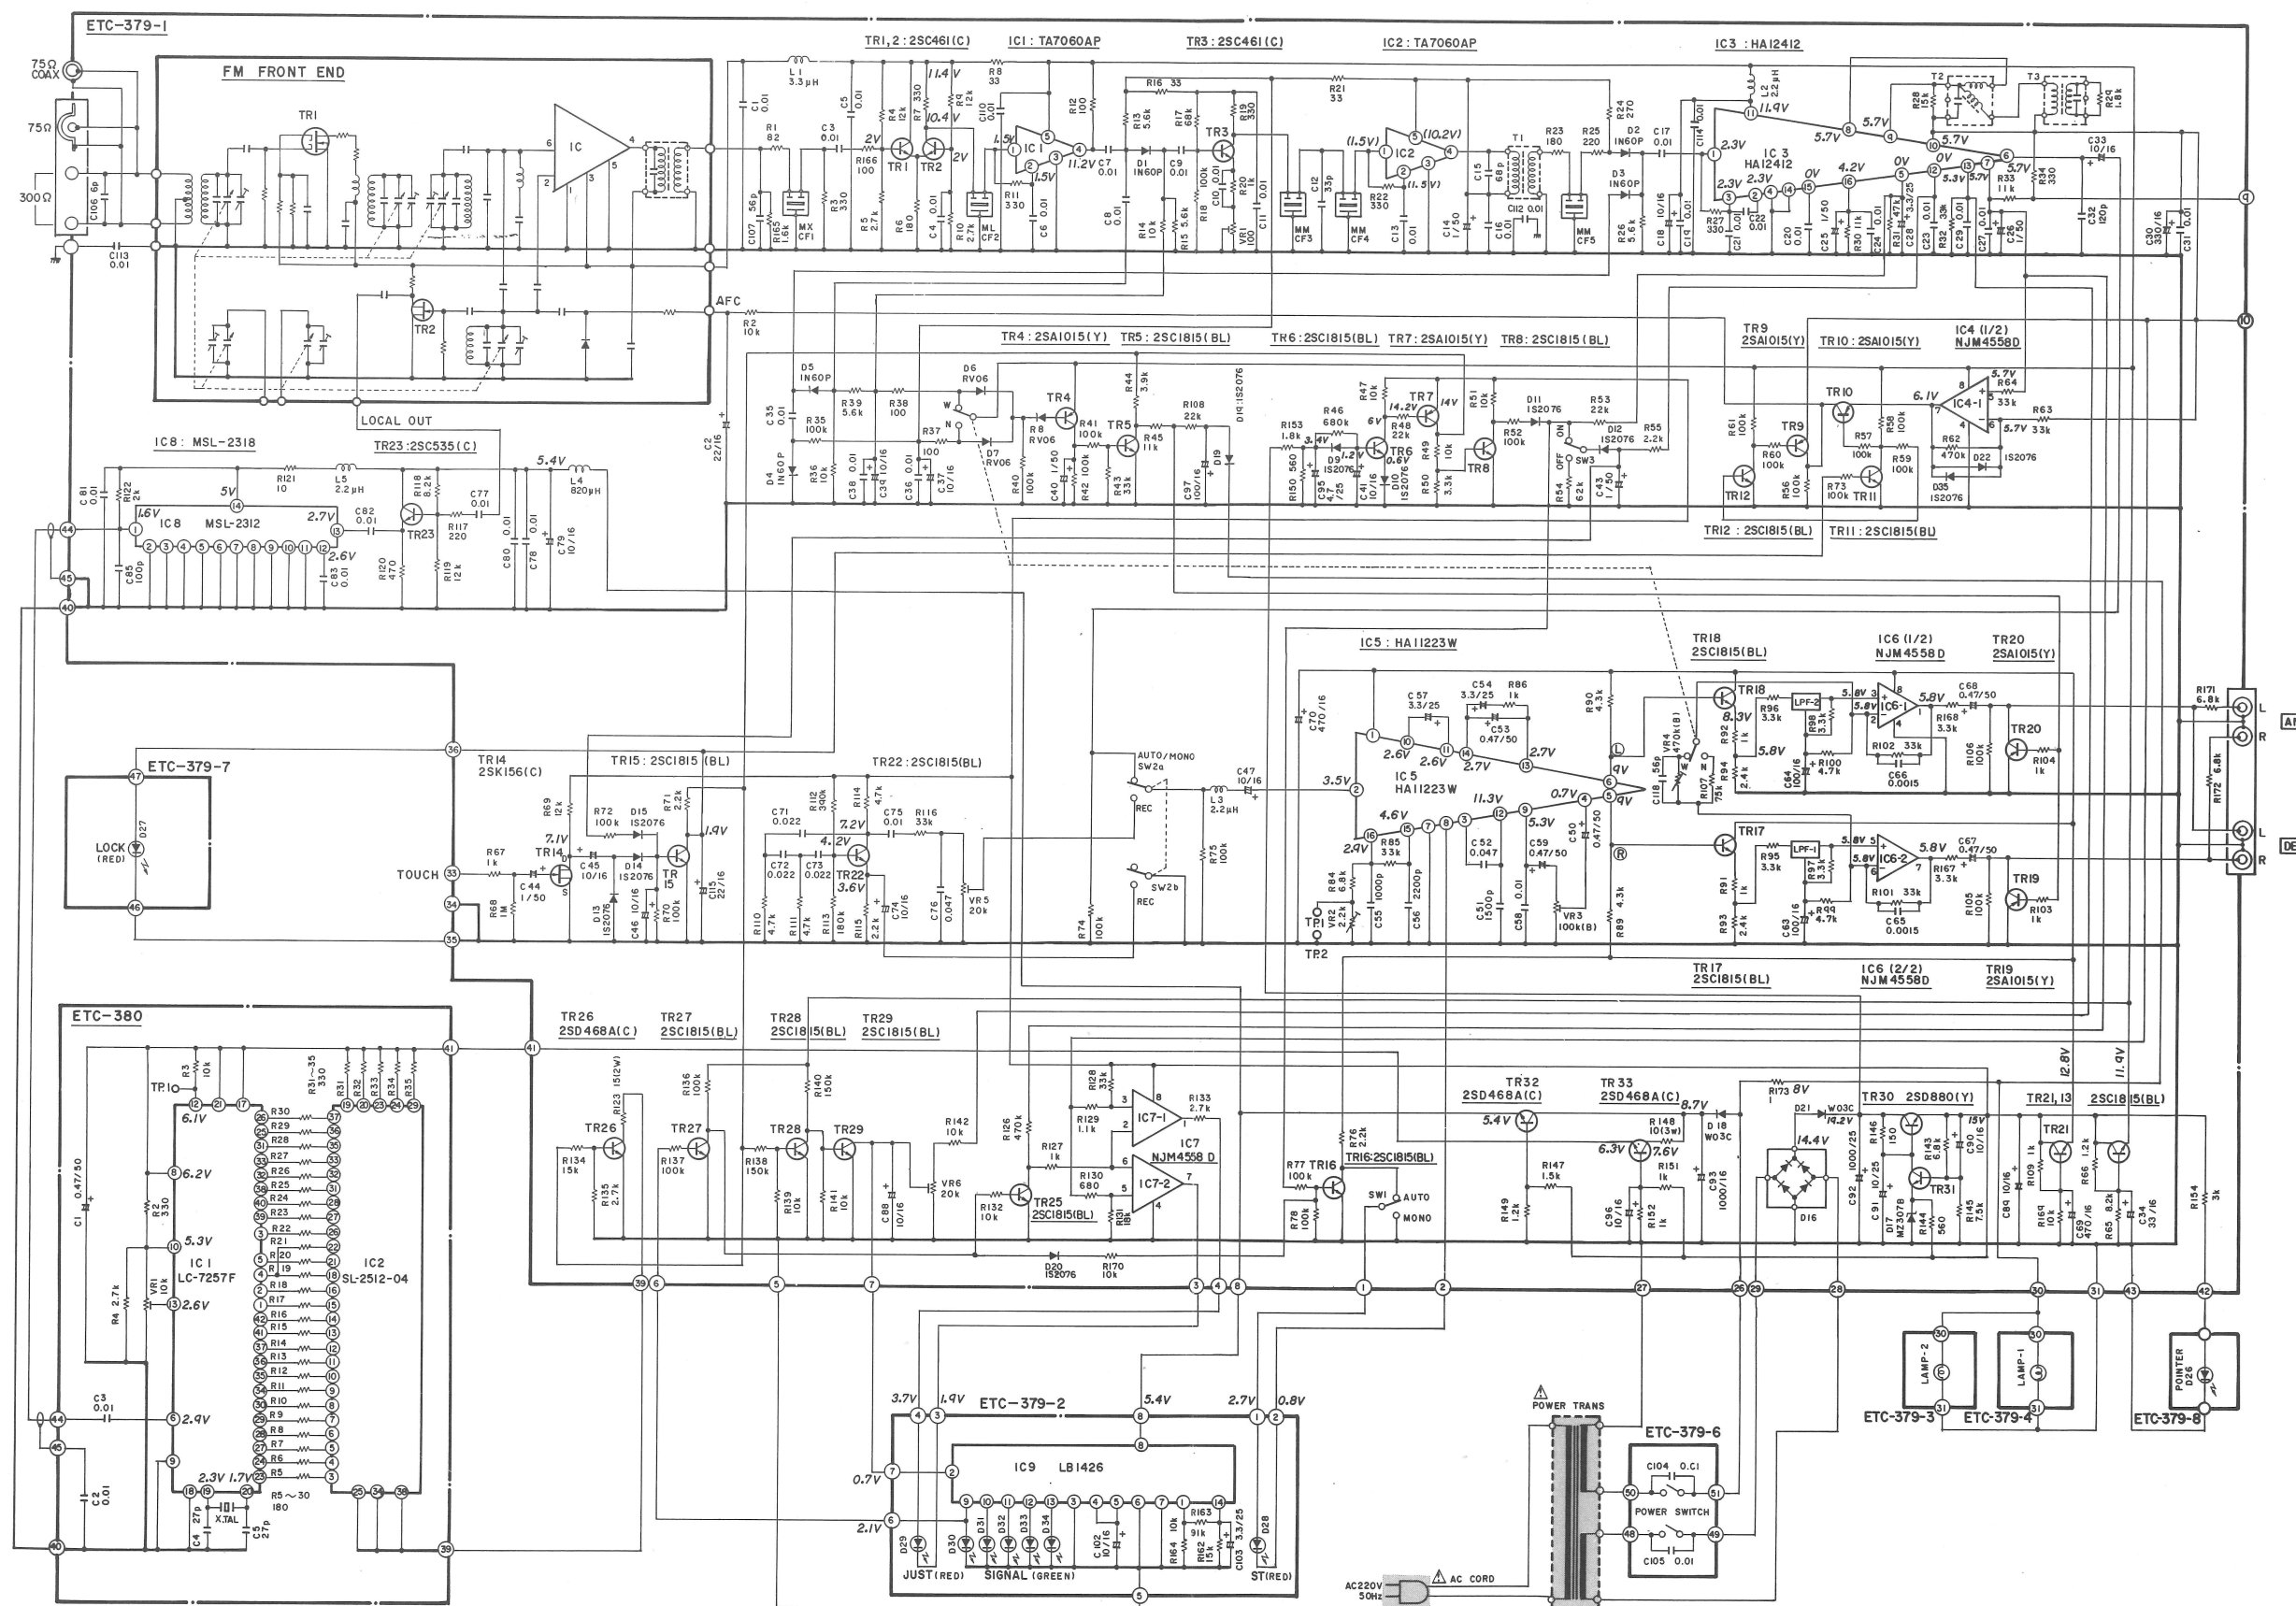

NOTE: RESISTANCE VALUES IN OHM, K=1,000 OHM, M=1,000 K OHM  
ALL CAPACITANCE VALUES IN MICRO FARAD P=MICRO-MICRO FARAD